

LevelOne (WBR-6003) 無線路由器使用說明



1	認諳	t LevelOne (WBR-6003)無線路由器	2
	A.	技術規格 - 周邊連接和擴充	2
	В.	基本電腦系統要求 (bb500/ FibreHome500/ bb1000/ FibreHome1000)	2
2	首次	z接駁 LevelOne (WBR-6003)無線路由器	3
3	由其	t他公司轉用香港寬頻服務	9
3	由其	t他公司轉用香港寬頻服務1	0
4	Leve	elOne (WBR-6003)無線路由器預設重置1	1



認識 LevelOne (WBR-6003)無線路由器

A. 技術規格 - 周邊連接和擴充



B. 基本電腦系統要求 (bb500/ FibreHome500/ bb1000/ FibreHome1000)

為確保閣下能享受穩定的寬頻速度,本公司建議客戶可參考以下之基本電腦系統要求

中央處理器	Intel Core2 Duo P8700/2.5 (3 GHz 或以上)
記憶體	4GB 或以上
硬碟	64GB SATA II SSD(讀寫速度至少需要 200MB/s)固態硬碟
網絡卡	100/1000M 以太網絡卡



首先,將數據線的一邊連接到牆身插座/光纖網絡終端機,另一邊則連接到 ASUS (RT-N56U) 無線路由器的 WAN 連接埠;接著,使用另一數據線將路由器的任何一個 LAN 連接埠連接至 電腦的 LAN 連接埠,然後開啟路由器的電源及電腦。

開啟網頁瀏覽器,於網址列輸入 [<u>http://192.168.1.1</u>]後按[Enter]。

於登入頁面後在[System Password]輸入預設使用者密碼[admin],按[Login]。

USER's MAIN MENU	1 Status				
System Part	ssword : (default: admin) Lo	agin			
System Status					
Item	WAN Status	Sidenote			
Remaining Lease Time	00:58:25				
IP Address	61.238.12.134				
Subnet Mask	255.255.255.192				
Gateway	61.238.12.129				
Domain Name Server	203.185.0.37, 203.185.0.36				
MAC Address	00-11-6B-66-7F-E9				
Wireless Status					
Item	WLAN Status	Sidenote			
Wireless mode	Enable				
SSID	LevelOne				
Channel	Auto				
Security	None				
MAC Address	00-11-68-66-7F-EA				
Statistics Information					
Statistics of WAN	Inbound	Outbound			
Octets	40181	49355			
Unicast Packets	172	196			
Non-unicast Packets	3	31			
Device	Refresh Time: 2014年11月23日 下午11:46:34 [GMT+8]				



選擇[Wizard]後按[Enter]。

		English
ADMINISTRATOR'S MAIN MENU	- Status	≻ Loge
Please Select the Operation	21	
	Wizard	
* This scr	een reminds you to configure until the Wizard is fini	shed.
	Enter	

設定精靈會顯示接下來的設定步驟,按[Next]繼續。

lever Tone				English
ADMINISTRATOR'S MAIN MENU	-II Status	Wizard	M Advanced	► Logout
Setup Wizard				[EXIT]
Setup Wizard will gu	uide you through	a basic configuratio	on procedure step by step.	
	Step 1. S	etup Login Password	I.	
	Step 2. W	/AN Setup.		
	Step 3. W	/ireless Setup.		
	▶ Step 4. S	ummary.		
	Step 5. F	inish.		
< Back [Start > Pas	ssword > WAN	> Wireless > Sui	mmary > Finish!]	Next >



於[Old Password]輸入原有路由器登入密碼後·在[New Password]及[Reconfirm]欄位設定新的路由器登入密碼·然後按[Next]繼續。

				English
ADMINISTRATOR'S MAIN MENU	-1 Status	💔 Wizard	M Advanced	▹ Logout
Setup Wizard - Setup Login Passw	vord			[EXIT]
	Old Password	•••••		
	New Password	•••••		
	Reconfirm			
< Back [Start >	Password > WAN >	Wireless > Sur	nmary > Finish!]	Next >

選擇[Auto Detecting WAN Type] · 按[Next] 。

levet one				English
ADMINISTRATOR'S MAIN MENU	-1 Status	Wizard	M Advanced	► Logout
Setup Wizard - WAN Type Setup				[EXIT]
	O Auto De	etecting WAN Type		
	◯ Setup V	VAN Type Manually		
< Back [Start > P	assword > <u>WAN</u>	> Wireless > Su	mmary > Finish!]	Next >



點選[Obtain an IP address from ISP automatically. (Dynamic IP Address)],按[Next]。

				English				
ADMINISTRATOR'S MAIN MENU	-1 Status	😾 Wizard	Advanced	► Logout				
Setup Wizard - Select WAN Type				[EXIT]				
ISP assigns you a static IP addr	ess. (Static IP Addre	ess)						
Obtain an IP address from ISP a	 Obtain an IP address from ISP automatically. (Dynamic IP Address) 							
O Dynamic IP Address with Road	Runner Session Ma	nagement. (e.g. Telst	ra BigPond)					
Some ISPs require the use of P	O Some ISPs require the use of PPPoE to connect to their services. (PPP over Ethernet)							
○ Some ISPs require the use of PPTP to connect to their services. (PPTP)								
Some ISPs require the use of L ²	2TP to connect to the	eir services. (L2TP)						
< Back [Start > P	assword > WAN	> Wireless > Su	mmary > Finish!]	Next >				

按[Next]繼續。

ADMINISTRATOR'S MAIN MENU	📲 Status 😽 Wizard 🕥 Advanced	► Logo
Setup Wizard - WAN Settings - Dy	namic IP Address	[EX
LAN IP Address	192.168.1.1	
Host Name	WBR-6003 (optional)	
WAINS MAC AUDIESS		



於[Wireless function]點選[Enable]後,設定新的無線網絡名稱[Network ID (SSID)],再於 [Channel]右方的選單選擇[Auto],然後按[Next]。

ever 2 n e				English
ADMINISTRATOR'S MAIN MENU	-11 Status	Wizard	M Advanced	▶ Logout
Setup Wizard - Wireless setting	5			[EXIT
 Wireless function 	Enable	Disable		
Network ID(SSID)	LevelOne			
Channel	Auto ᅌ			
< Back [Start	> Password > WAN	> <u>Wireless</u> > Su	mmary > Finish!]	Next >

在[Security]右方的選單選擇[WPA-PSK/WPA2-PSK],按[Next]。

leve" on e				English
ADMINISTRATOR'S MAIN MENU	- Status	😾 Wizard	Advanced	▶ Logout
Setup Wizard - Wireless Security				[EXIT]
► Security	Vone WEP WPA-PSK	WPA2-PSK		
< Back [Start > P	assword > WAN	> <u>Wireless</u> > Su	mmary > Finish!]	Next >



在[Preshare Key Mode]右方的選單選擇[ASCII], 設定新的無線網絡金鑰[Preshare Key] · 按 [Next]。

lever on e				English ᅌ
ADMINISTRATOR'S MAIN MENU	-i Status	😾 Wizard	M Advanced	▶ Logout
Setup Wizard - Wireless Security				[EXIT]
 Security Preshare Key Mode Preshare Key 	WPA-PSK / ASCII	WPA2-PSK ᅌ		
< Back [Start > P	assword > WAN	> <u>Wireless</u> > Su	mmary > Finish!]	Next >

確保所有設定資料正確無誤後·按[Apply Settings]·於路由器套用設定後按[Next]再按[Finish]·

level"				English
ADMINISTRATOR'S MAIN MEN	IU 📲 Status	Wizard	M Advanced	► Logout
Setup Wizard - Summary				[EXIT]
	Please confirm t	he informatio	n below.	
[WAN Setting]			
V	WAN Type		ldress	
н	lost Name	WBR-6003		
v	VAN's MAC Address	00-11-6B-66-7	F-E9	
1	[Wireless Setting]			
v	Vireless	Enable		
s	SID	LevelOne		
C	hannel	Auto		
s	ecurity	WPA-Personal Personal	/ WPA2-	
Do you want to proceed the network testing?				
< Back [Start > Password > WAN > Wireless > Summary > Finish!] Apply Settings				



3 由其他公司轉用香港寬頻服務

進入路由器設定主頁後,點選[Advanced Setup]後按[Enter]。

	English
ADMINISTRATOR'S MAIN MENU - Status	► Logout
Please Select the Operations	
• Wizard	
Advanced Setup	
* This screen reminds you to configure until the Wizard is finished.	
Enter	

點選[Primary Setup] · 按[WAN Type] 右方的[Change]。

ADMINISTRATO	R's MAIN MENU - 1 Stat	tus \∀wi	zard 📢	I Advanced	Logout
BASIC SETTING		SECURITY	SETTING	ADVANCED SETTING	(toolad
Primary Setup	Primary Setup				[Help]
DHCP Server	Item		Setting		
Wireless	LAN IP Address	192	168.1.1		
Change Password	WAN Type		PPP over Ethernet Change		
	PPPoE Account		username@isp.com		
	PPPoE Password				
	Primary DNS		0.0		
	Secondary DNS		0.0.0.0		
	Maximum Idle Time		300 seconds		
	Authentication method Auto				
	Connection Control Connect-on-demand PPPoE Service Name (optional)				
			(optional)		
	Assigned IP Address	0.0.	0.0	(optional)	
	▶ MTU	149	2		
	IGMP	OB	habled 💿 Disab	led	
		Save	Undo Rebo	sot	



3 由其他公司轉用香港寬頻服務

點選[Choose WAN Type]中的[Dynamic IP Address – Obtain an IP address from ISP automatically]後按 [Save]。

level" one			English		
	DR's MAIN MENU - 11 Status	Wizard 🕅 Advanced	▶ Logout		
BASIC SETTING	Softwarding Rules	SECURITY SETTING	TOOLBOX		
Primary Setup	Primary Setup				
DHCP Server	Туре	Usage			
• Wireless	Static IP Address	ISP assigns you a static IP address.			
Change Baseword	O Dynamic IP Address C	Dynamic IP Address Obtain an IP address from ISP automatically.			
• Change Password	O Dynamic IP Address with Ro	O Dynamic IP Address with Road Runner Session Management.(e.g. Telstra BigPond)			
	O PPP over Ethernet S	O PPP over Ethernet Some ISPs require the use of PPPoE to connect to their services.			
	O PPTP S	PPTP Some ISPs require the use of PPTP to connect to their services.			
	C L2TP S	Some ISPs require the use of L2TP to connect to their services.			
	Save Cancel				

確認[WAN Type]已更新為[Dynamic IP Address],按[Save]更新設定。

level" o n e					English
	TOR's MAIN MENU - M Statu	is 👫	Wizard	Advanced	▶ Logout
BASIC SETTING	FORWARDING RULES	SECI	URITY SETTING	ADVANCED SETTING	TOOLBOX
Primary Setup	Primary Setup				[Help]
DHCP Server	Item		Setting		
Wireless	LAN IP Address		192.168.1.1		
Change Password	► WAN Type		Dynamic IP Address Change		
			WBR-6003	(optional)	
	WAN's MAC Address		00-11-6B-66-7F-E9 Clone MAC		
	Renew IP Forever		Enable (Auto-reconnect)		
	▶ IGMP		CEnabled Obisabled		
		Save	Undo Virtual	Computers	



4 LevelOne (WBR-6003)無線路由器預設重置

如不能登入 LevelOne (WBR-6003)路由器的設定版面,閣下可使用重置按鈕恢復路由器至出廠預設。當完成重置後,所有設定都將恢復成預設值。

- 1. 確保 LevelOne (WBR-6003)路由器電源已連接並開啟。
- 2. 使用尖銳物件按住重置按鈕約5秒。
- 3. 出廠預設值:

使用者密碼	IP 位址	SSID
admin	192.168.0.1	LevelOne

重置按鈕設在路由器後方。

