

### Linksys Wireless Router (EA6900) Setup User's Guide



1 Get to know Linksys (EA6900) Router	.2
A. Tech Specs - Connections and Expansion	.2
B. Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000)	.2
2 Connecting the Linksys router	.3
3 Switching your broadband Internet service to HKBN	.7
4 Factory default reset of Linksys Router	.9



### Get to know Linksys (EA6900) Router

#### A. Tech Specs - Connections and Expansion



#### B. Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000)

To ensure that you have a fast and stable network, please refer to the following as a recommended minimum system requirement.

Intel Core2 Duo P8700/2.5 (3 GHz or above)
4GB or above
64GB SATA II SSD (Min. I/O speed of 200MB/s)
100/1000M Network Adaptor





Make sure you have a LAN cable connected from the HKBN wall plate/ONT to the Internet port of your Linksys Router (EA6900). Using a second LAN cable, connect it from the Router LAN port to the computer LAN port. Once finished, switch on the power supply for the router and turn on the computer.

Open your Internet browser, and input [http://192.168.1.1] into the address-bar then press [Enter]. Linksys Smart Wi-Fi Setup will start automatically, choose [I have read and accepted the License Terms for using this software], click [Next]

Linksys Smart Wi-Fi Setup	
Linksys Smart Wi-Fi Setup will help you set up your router and get it connected to the Internet. Your new wireless home network will be online in just a few minutes.	
Click Next to continue.	
Lhave read and accepted the License Terms for using this software	H Q
I want to skip Setup and configure my router manually	
O To access Setup in the future you must factory reset your router.	
	Back



Create a [2.4GHz Network Name] and [Network Password]. Linksys Router (EA6900) supports both 2.4GHz and 5GHz wireless connections, it is recommended that you tick the box [Make network names the same] then click [Next] to continue.

WAELESS SETTINGS		
2.4 GHz Network Name	5 GHz Network Name	
Wifi Name	Will Name	
1-32 characters	Make network names the same.	
Network Pasaword (2.4 GHz and 5 0	(Hz)	
Will Password		
8-63 characters	-	
1. 2010 State Stat		
O Your dual band router allows you to	set up two networks: 2.4 GHz and 5 GHz. Learn more	

After creating the network name and network password, create a [Router password], then click [Next] to continue.

Create a ro	te a router password uter password that you will use to access router settings.	
The router different. B Guide.	paseword can be the same as your wireless network paseword, e sure to write the router paseword in the space provided in the ADMINISTRATION	or something Quick Start
	Router password	
°¢	Admin Password	
	1-63 dwaters Jeters and numbers)	



#### Confirm all settings displayed are correct then click [Next]

Your route Guide, or	er has been successfully set up. Below a wherever you like. You may need these	re your router settings. Write them in the s in the future when adding new devices to	pace provided on the Quick Start your network.	
	2.4 GHz Network Name:	Will Name		
	2.4 GHz Network Password	Wifi Password		
	5 GHz Network Name:	Will Name		
	5 GHz Network Password:	Will Password		
	Router Password:	Admin Password		

Tick the box [No thanks] then click [Next]

With a free Linkeys Smart Wi-Fi account you can access your router settings and your home ne ninutes to setup.	twork anytime, anywhere. This optional account takes just
Why Linkays Smart Wi-FI?   • Access to your home network, even when you're away from home.   • Apps that help you erjoy and manage your connected home.   • Intelligent media protrikation for HD video and gaming.   • Wew and manage multiple home networks; for example, your parent's home network or a vacation home.   Intelligent media protection home.   Intelligent home networks; for example, your parent's home network or a vacation home.	E Q Contraction
Vready have an account? Sign.In	





The [Network Status] under the [Router Settings Home Page] will show [Connected] with green checkmarks displayed between [THIS DEVICE], [ROUTER] AND [INTERNET].



Select [Troubleshooting] under [Router Settings] and the IPv4 address will display under [Internet address] in the [Diagnostics] page.

INCSYS <sup>®</sup> Smart Wi-Fi	App Center Help With Name 🛩 Sign Out	*
<		
		12
Status Diagnostics Logs		
Ping IPv4	Router configuration	
B3 IP or host name:	Backup Restore	
Number to ping: 5 +	Router Firmware	
Start to Ping	Restore previous limmware	
Trace route	Internet Address:	
IP or host name:	IPv4: 124.244.246.84 Release and Renew	
Start to Traceroule	IPv6 Release and Ronew	
Reboot	Factory reset	
Reboot the router	Reset to factory default actings	
8		



### **3** Switching your broadband Internet service to HKBN

After logging in to the router through your browser, select [Connectivity] under [Router Settings].



Choose [Automatic Configuration – DHCP] under [Connection Type] then click [Apply].





### ${\bf 3}$ Switching your broadband Internet service to HKBN

#### Click [OK] to apply the changes.



Wait for the device to restart, this will normally take several minutes.

CSYS" Smart Wi-Fi	App Center Help Witi Name 👻 Sign C
Troubleshooting	
Status Diagnostics Loga	
Ping IPv4	Router configuration
IP or host name:	Backup Restore
Number to ping: 5	Router Firmware
Start to Ping	Restore previous firmware
Trace route	Internet Address:
IP or host name.	IPv4: 124.244.246.84 Release and Renev
Start to Traceroute	IPv6: Release and Renew
Reboot	Factory reset
Reboot the nouter	Reset to factory default settings
	x

Once the device has restarted, select [Troubleshooting] under [Router Settings] and the IPv4 address will display under [Internet address] in the [Diagnostics] page.



### 4 Factory default reset of Linksys Router

Login to the router setting page, select [Troubleshooting] under [Router Settings].



Click [Reset to factory default settings] in the [Diagnostics] page.

INCSYS <sup>®</sup> Smart Wi-Fi	App Center Help Witi Nar	me 👻 Sign Out 🔹
<		
Status Diagnostics Logi		
Ping IPv4	Router configuration	
B IP or host name:	Backup Restore	
Number to ping: 5 0	Router Firmware	
Start to Ping	Restore previous firmware	
Trace route	Internet Address:	
IP or host name:	IPv4: 124.244.246.84	Release and Renew
Start to Traceroute	IPré:	Release and Renew
6 Reboot	Factory reset	
Reboot the router	Reset to factory default settings	
0		
		OK
3		





If the device is not accessible from the router setting page, you can reset to the factory default setting by pressing the reset button:

- 1. Confirm the Linksys router is switched on.
- 2. Press and hold the [Reset] button with a sharp object until the power indicator (LED light at the front of the Linksys router) flashes after a few seconds.

The Reset button is located to the left of [USB1] port.

